

Instructions for Use

Plug the Eco-eye unit into the mains wall socket and plug the electrical appliance you wish to monitor into the Eco-eye Plug-in socket.

1. To set the Unit Cost: Press the ▼ button once, release, then press again and hold down whilst pressing the function button ■. Then release both buttons. The numerals should now be flashing. Scroll up and down using the arrow keys ◆ to set the Unit Cost of your electricity. When done, press ■ to set the chosen amount.

2. Function Button ■

Press once to display the each of the following in sequence (i) total running time in minutes (ii) power consumption in Watts (iii) voltage 'V' (iv) current 'A' (v) frequency in Hz (vi) lowest power consumption in Watts (vii) highest power consumption in Watts (viii) price per unit £/KwH (ix) total cost of electricity used in £s and total KwH used.

3. Press the ▲ to display the current power consumption on the LCD.

4. Press the downward ▼ to display the total cost of all electricity used and total K.W. When pressed again, the unit charge per K.W is displayed.

5. Reset: Press ■ for 4 seconds or simply unplug the unit.

6. Overload Protection: If the LED light marked OL is illuminated, this means the unit is consuming more power than is acceptable.